


# Yellow Comet Recon instructions

## step 1



## step 2

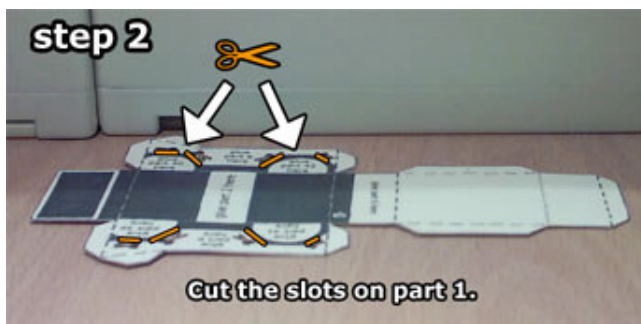


## step 3











## step 4



## step 5

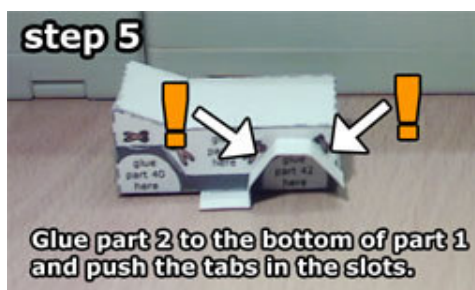

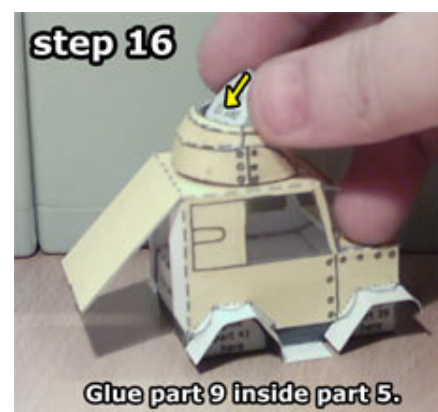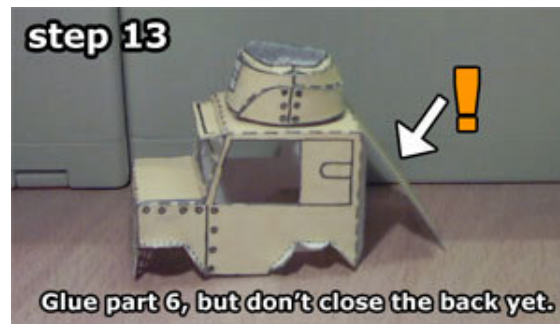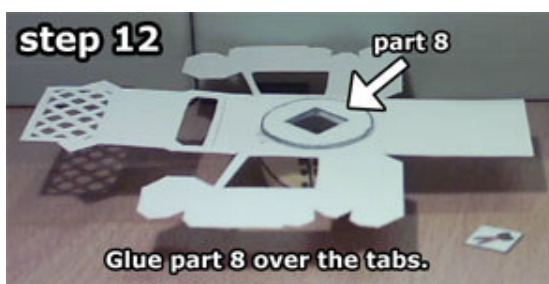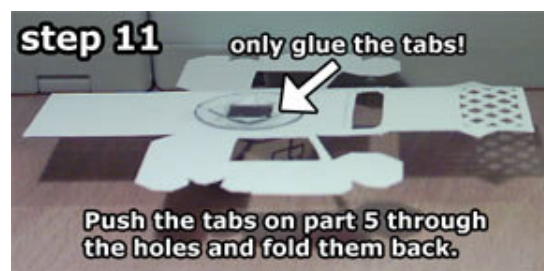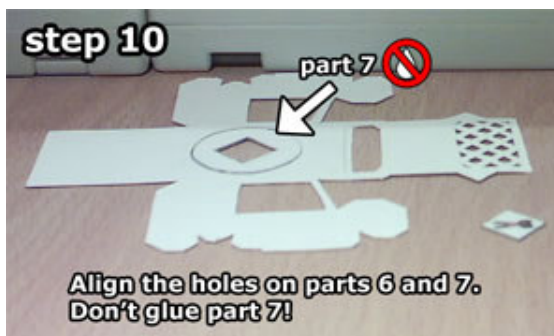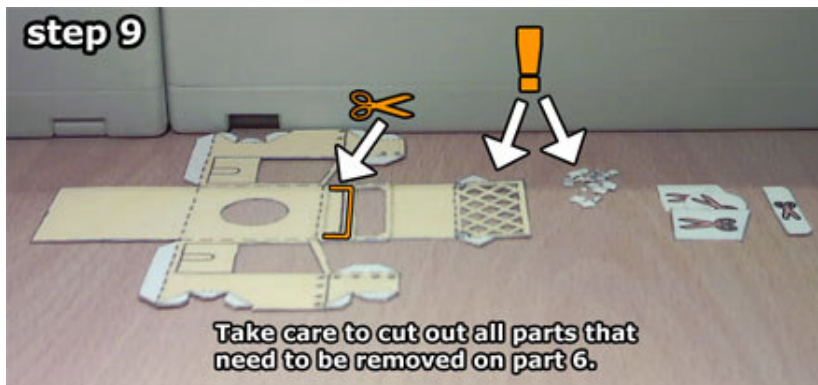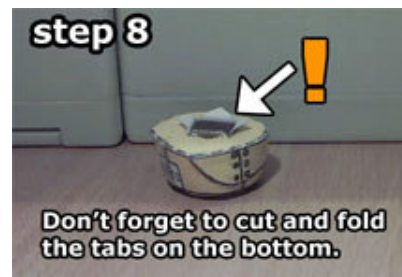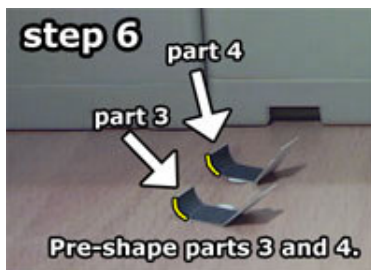



### step 17



Glue part 10 on top of part 9.

### step 18




Part 10 isn't an exact fit and will only cover up a part of the inside, but that's sufficient.

### step 20




Glue the two parts to the turret.

### step 19

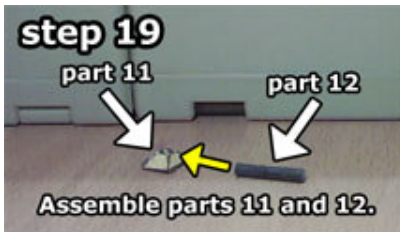


Assemble parts 11 and 12.

### step 21

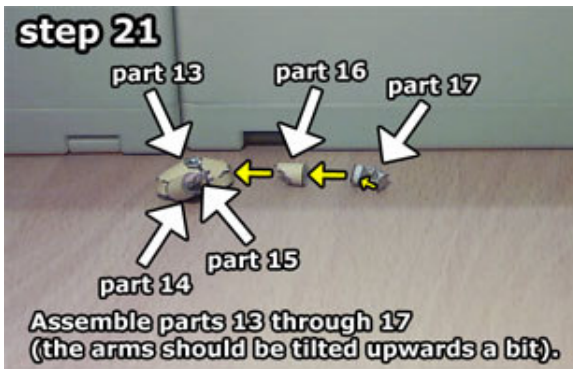

Assemble parts 13 through 17 (the arms should be tilted upwards a bit).

### step 22

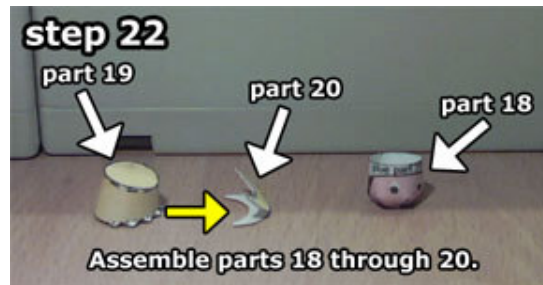


Assemble parts 18 through 20.

### step 23



Glue the gunner on top of part 10 inside the turret.

### step 24

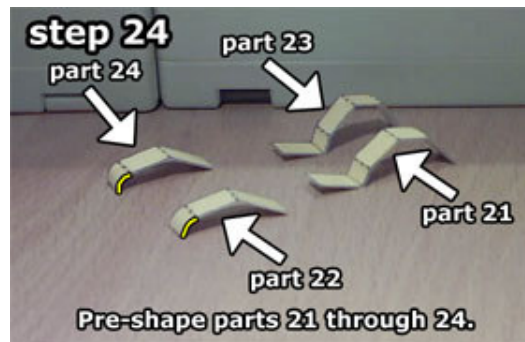

Pre-shape parts 21 through 24.

